

ELFINVISION

Wheelchair Assistant



Wheelchair

Reliable
wheelchair
detection
for elevators.

 


Wheelchair
detected

Briefly explained.

The ELFINVISION Wheelchair Assistant detects wheelchairs using optical sensors and AI-supported local processing. Unlike with other technologies, wheelchairs are detected reliably and without risk of confusion. The elevator can then, for example, be called fully automatically, adjust door opening times, or trigger a priority ride – entirely according to your requirements.

The key advantage over permanently extended door opening times lies in the overall performance of the elevator. This is particularly relevant in hospitals and care facilities, where door timing is one of the most important factors influencing transport capacity. With situational adjustment, the elevator remains accessible to everyone without slowing down operation for all users.

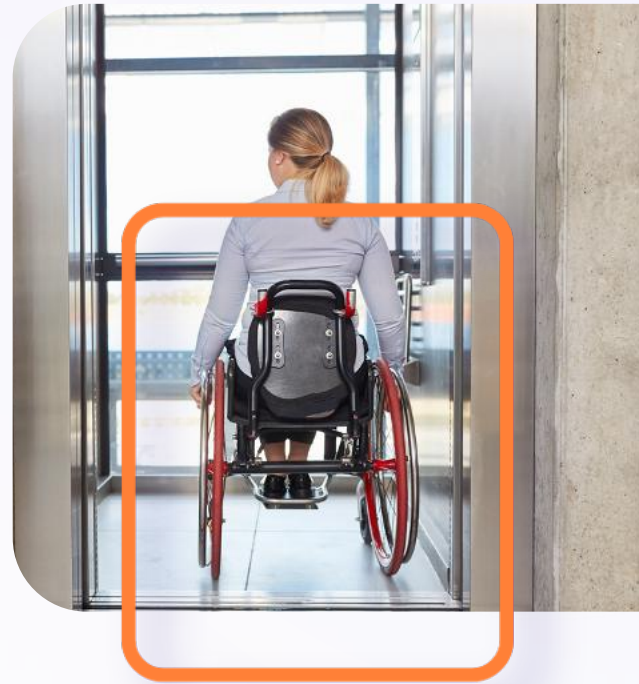

Automatic calls & extended door hold time:

Sensors and AI analysis send the corresponding signals to the elevator control system.

Increased safety

through risk prevention and rapid, automated responses to unauthorized use and dangerous situations.

Improved user experience & operational efficiency

through smooth, intelligent workflows and context-based control and prioritization.



GDPR-compliant



Autonomous system without cloud connection



Open interface to control & monitoring systems



For every elevator – new builds and modernizations alike



Technical data.

Sensors.



Sensor for Surface mounting

Art.no.: cel-XMP-ETH-DOME

- Viewing angle: 170°
- Power supply: PoE or 12V power supply unit
- Dimensions: 120 x 120 x 100 mm
- Range: up to 10 m

Accessories:

- 12V power supply unit (snt-120-050A)
- 2 m Ethernet cable (net-LAN-2m)

or



Sensor for Wall & ceiling recessed mounting

Art.no.: cel-XMP-USB-FEB

- Viewing angle: 160°
- Power supply: via processing unit
- Dimensions: 90 x 90 x 50 mm
- Connection cable: 2 m fixed cable (directly to the sensor)
- Range: up to 5m

Technical data. Processing unit.

flexyPage®

Or



Boxed V4

Art.no.: fel4A-01A-CV

- Power supply: 24 VDC
- Dimensions: 190 x 88 x 20 mm
- Interfaces: 4 inputs and CAN

Accessories:

- 24V power supply unit (snt-240-050A)
- I/O node with 16 inputs and outputs (cio-cn16-set2m)



flexyPage displays

- Power supply: 12-24 VDC
- Dimensions: 7 - 46 inch
- Interfaces: 4 inputs and CAN

Accessories:

- 24V power supply unit (snt-240-050A)
- I/O node with 16 inputs and outputs (cio-cn16-set2m)



Benefits of a flexyPage display compared to invisible Boxed V4



 
 
Can be integrated into existing elevator equipment, for example as a floor display or to show information messages such as "Extended door opening time".

On-site commissioning.


Sensor installation

The sensors can be installed in the ceiling, wall or door frame, depending on the model. The right sensor for your project depends on the available installation options.

On the floors

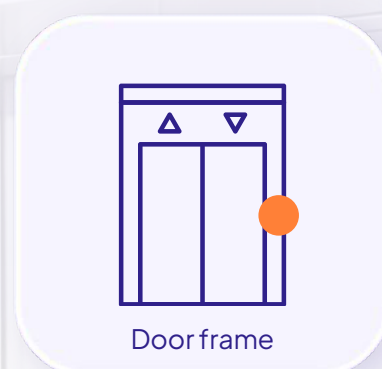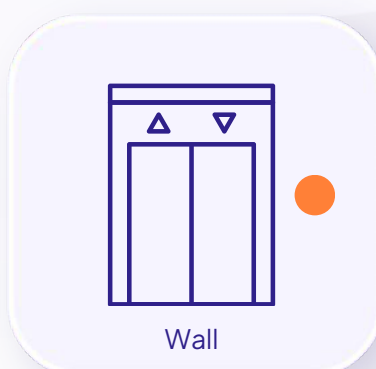

In the elevator car

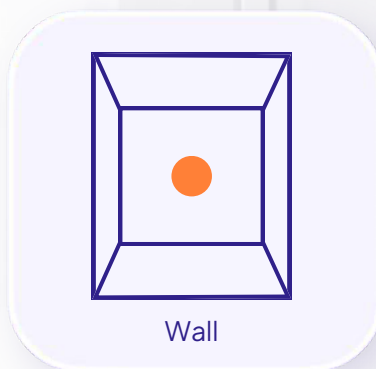 

-  Surface mounting
-  Wall & ceiling recessed mounting




When positioning the sensors, please ensure that:

- there are no blind spots
- no direct light falls into the sensor
- the relevant area is fully visible

On-site commissioning.

Wiring

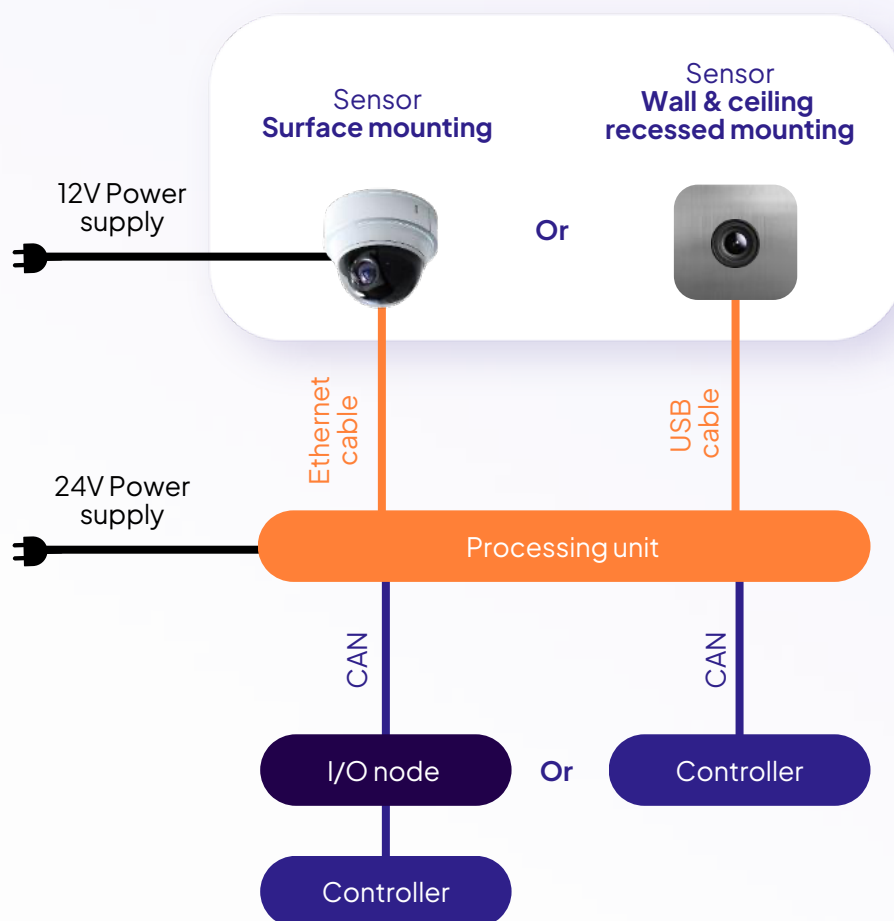

CANopen

Special function code 0E _h	Function
11 _h	Hold door open

I/O node


Output	Function
1	Wheelchair detected
2	System active (Sensor ready for operation)

On-site commissioning.

Zone Definer

The Zone Definer allows you to manage all connected sensors and configure them for object detection.

 It supports both surface mounting sensors and wall & ceiling recessed mounting sensors, enabling flexible monitoring and image processing.

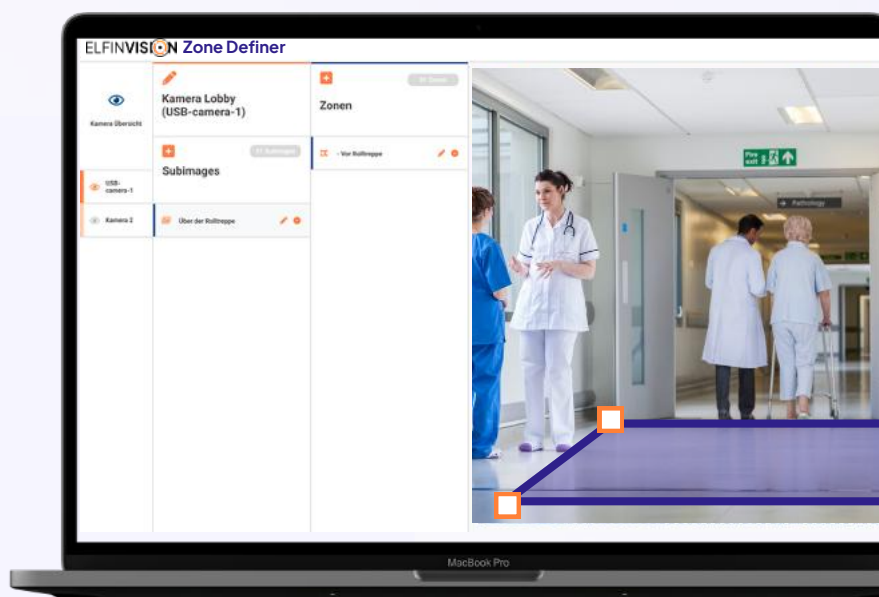

Sensor detection and configuration

- **Surface mounting sensor:** Are automatically detected and can be configured directly via the web interface.
- **Wall & ceiling recessed mounting sensor:** Must be added manually by entering a stream URL.

Sensor settings:

The following parameters can be configured for each sensor:

- **Fisheye view cropping:** Focuses on the relevant circular image area.
- **Distortion correction parameters:** Corrects lens distortion.
- **Sensor name:** Allows each sensor to be assigned a descriptive name.

Zones

With the Zone Definer, individual areas within the image can be defined using polygon selection. These zones determine where objects should be detected. Areas that should be ignored during detection can also be defined. This configuration is set individually for each sensor, allowing location-specific and customized setup.

This makes it possible to take the specific conditions at each sensor location into account and adjust the detection settings accordingly.



Order details.

To operate the ELFINVISION Wheelchair Assistant, a selection of the products listed below is required. When placing your order, please specify the desired quantity as well as the corresponding article numbers of the components you require or that have been recommended by us.

Sensors

Article numbers sensors

- **Sensor surface mounting**

Accessories

- **12V power supply unit**
- **2m ethernet cable**

- cel-XMP-ETH-DOME

- snt-120-050A
- net-LAN-2mI

Or

- **Sensor wall & ceiling recessed mounting**

- cel-XMP-USB-FEB

Processing unit

Article numbers processing unit

- **Boxed V4 processing unit**

Accessories

- **24V power supply unit**
- **I/O node with 16 in- & outputs**
(optional)

- fel4A-01A-CV

- snt-240-050A
- cio-cn16-set2m

Or

- **flexyPage display**

Accessories

- **24V power supply unit**
- **I/O node with 16 in- & outputs**
(optional)

- snt-240-050A
- cio-cn16-set2m

flexyPage®

Visit flexyPage.de/displays to discover the various display sizes.



ELFIN Technology GmbH
Im Zollhafen 22
50678 Cologne, Germany

+49 221 6778932-0
sales@elfin.de
elfin.de